



P.O. Box 172 • 930 Roberts Road • Sparta, WI 54656 • (608) 269-3752

OPERATING KEN-WAY CLEANERS

- 1.**
Place machine **NO MORE** than 2-1/2 feet from cleanout. Feed cable from side of machine. **NEVER** operate machine with your back to machine
- 2.**
Feed cable with a continuous back & forth motion. This allows you to keep the blade from being hung up. When blade is stopped and machine continues to run, cable breakage will occur. If you are unable to free blade end by pulling back, **IMMEDIATELY STOP MACHINE** by releasing pressure on foot pedal and then work the cable free.
- 3.**
Always wear gloves (steel impregnated) and approved safety glasses along with long sleeves. If cable breakage occurs and the machine continues to run, sharp edges may whip around causing injury. **KEEP BODY PARTS AND LOOSE CLOTHING AWAY FROM MOVING PARTS** (Drum, motor, belt and cable). Use of a Ken-Way Cable Drive on '400' models is recommended. **DO NOT DISCONNECT FOOTSWITCH OR USE REMOTE MEANS OF APPLYING PRESSURE TO FOOT PEDAL.** Keep foot on foot pedal and be prepared to release pressure to stop machine in case of trouble.
- 4.**
When returning cable into drum, make sure cable feeds into drum in even rows from back of drum to front. If a coil goes in unevenly, pull it back out and re-feed.

TRAPS, T'S & SHARP ELBOWS

When you are unable to negotiate a tight turn: Stop machine. When drum stops turning, move reversing switch to reverse position (switch leans away from motor). Push cable up to obstruction and depress foot pedal briefly (no more than 2 seconds). This will usually pop blade end past the turn. Return reversing switch to forward and continue on.

MAKE SURE CABLE IS SECURELY ANCHORED AND IS INSTALLED IN DRUM IN PROPER DIRECTION (FEEDS IN CLOCKWISE).